# SATELLINE-3ASd Epic Pro

IP67 radio modem

# TABLE OF CONTENTS

TABLE OF CONTENTS ..... 2
IMPORTANT NOTICE ..... 3
1 GENERAL ..... 4
1.1 CONNECTORS AND USER INTERFACE ..... 4
1 OPERATION ..... 5
1.2 PRELIMINARY SETTINGS ..... 5
1.3 USER INTERFACE ..... 5

# IMPORTANT NOTICE

All rights to this manual are owned solely by SATEL OY (later called also SATEL). All rights reserved. The copying of this manual without the written permission from the owner of the rights by printing, copying, recording or by any other means or the full or -languages using any electrical, mechanical, magnetic, optical, manual or other methods or devices is forbidden.

SATEL reserves the right to change the technical specifications or functions of its products or to discontinue the manufacture of any of its products or to discontinue the support of any of its products without any written announcement and urges its customers to ensure, that the information at their disposal is valid.

SATEL software and programs are delivered "as is". The manufacturer does not grant any kind of warranty including guarantees on saleability and guarantees pertaining to applicability to a certain application. Under no circumstances is the manufacturer or the developer of a program responsible for any possible damages caused by the use of a program. The names of the programs as well as all copyrights relating to the programs are the sole property of SATEL. Any transfer, licensing to a third party, leasing, renting, transportation, copying, editing, translating, modifying into another programming language or reverse engineering for any intent is forbidden without the written consent of SATEL.

SATEL PRODUCTS HAVE NOT BEEN DESIGNED, INTENDED NOR INSPECTED TO BE USED IN ANY LIFE SUPPORT RELATED DEVICE OR SYSTEM RELATED FUNCTION NOR AS A PART OF ANY OTHER CRITICAL SYSTEM AND ARE GRANTED NO FUNCTIONAL WARRANTY IF THEY ARE USED IN ANY OF THE APPLICATIONS MENTIONED.

# 1 General

## 1.1 Connectors and user interface

# 1 Operation

## 1.2 Preliminary settings

1. Antenna connector

Connect the antenna (antenna cable) to the antenna connector prior to any other operation.

2. Turning ON/OFF

The radio modem is turned ON/OFF by plugging in and removing the Power connector.

## 1.3 User interface

1. Display
2. Keypad
3. How to change channel
4. Power level

### 1.1 Display

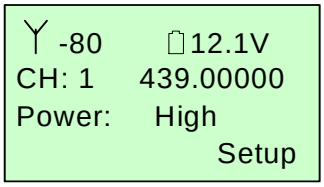


| | |
|---|---|
| Y | Field stength indicator. shows how strong is the received signal. For example: -80 |
| 12.1V | Battery level indicator. |
| CH: 1 | Channel number followed by the actual frequency. For example 439.00000. The maximum number of channels is 16. |
| Power: | Shows the output power level. The setting is LOW, MEDIUM, HIGH. |
| Setup | Executing commands |

### 1.2 Keypad

Buttons for changing settings.

For moving the cursor up and down.

The user definable changes are channel and power level settings.

### 3.1 How to change channel

1. Press ■ =Setup. Wait a moment until the display changes.

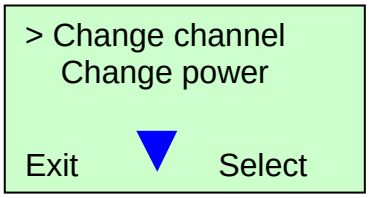


2. Press ■ =Select
3. Pressing of the ▲ ▼ -buttons will change the channel number.

Select channel and press ■ =Set, press ● = Exit, press ■ =YES.
The new settings are now saved to the memory.

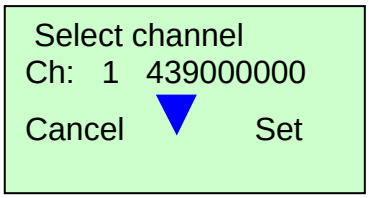


**Short guide:**
**Setup – Select - Change- Set – Exit – YES**
■ ■ ▲ ▼ ■ ● ■

### 3.2 How to change Power level

1. Press ■ =Setup. Wait a moment until the display changes

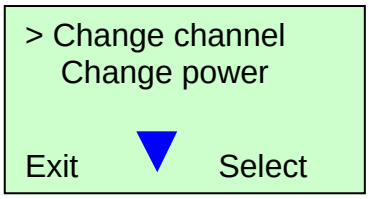


2. Press ▼ and press ■ =Select.
3. ▲ ▼ - will change the power level.

Select the power and press ■ = Set, press ● = Exit, press ■ =YES.
The new settings are now saved to the memory.

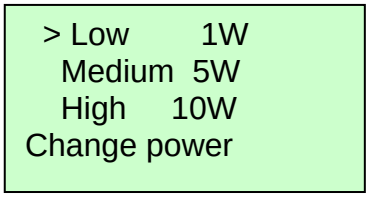


**Short guide:**
**Setup – Move - Select – Move - Set - Exit - YES**
■ ▼ ■ ▲ ▼ ■ ● ■

**NOTE!** If the Cancel or Exit is pressed before saving (■ =YES) there will be no changes and the previous settings will remain valid.